



### **Pre-Filter Check**

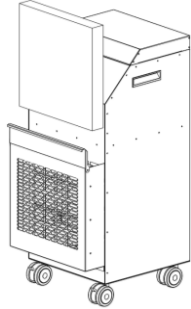

Open compartment lid.  
Pull out pre-filter.

### **HEPA Filter Check**

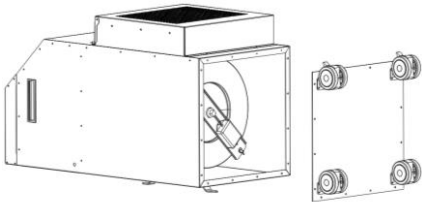

Remove bottom plate.  
Check wing nuts and HEPA filter.

Distributed by:

TRI-DIM FILTER CORPORATION  
93 Industrial Drive  
Louisa, VA 23093  
[www.tridim.com](http://www.tridim.com)  
1-800-458-9835




**SCAN ME**

p/n: 2007-0566-S01



## TRI-KLEEN 500UV

### **Quick Start Guide**

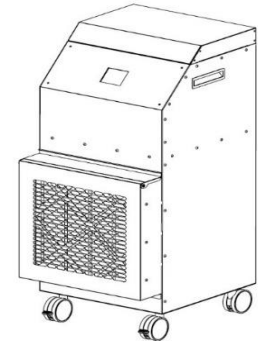

### 1. Before plugging device in

- Check that both HEPA filter and MERV8 pre-filter are **Installed And Undamaged**.
- **Inspect And Tighten** both HEPA filter retaining wing nuts that may have loosened during transportation.

### 2. Start Screen

- Once TRI-KLEEN 500UV is plugged in, the touchscreen will automatically turn on.
- The **Start Screen** will appear.




### 3. Default PIN

- Touch anywhere on the screen to bring up the **PIN Entry Screen**.
- Type in the default PIN: **0000**.



### 4. Main Menu

- Select **Fan Speed** using arrows.
- Check **Filter Health** and **Time To Service**.
- Turn **UV Lamp** on/off.
- **Lock** the screen.
- Change **System Settings**.

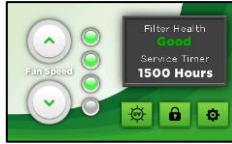

### 5. System Settings Menu

- **Filter Info** with usage percentage.
- **Calibrate** TRI-KLEEN 500UV after HEPA filter change.
- Choose to **Change PIN**.
- **Disable PIN** and lock screen.
- Contact options for **Support**.



### 5.1 Filter Info

- Check **HEPA Filter Usage** since last filter change.
- Turn on/off **Audio Alerts** (device beeps if HEPA filter needs to be changed).



- When HEPA filter change is due, **Service Filter Alert** on start screen appears.



### 5.2 Support

- Refer to **User Manual** for detailed information on TRI-KLEEN 500UV.
- Scan **QR Code** on backside of this Quick Start Guide.
- Call **Customer Service**.

